

PORTABLE SPEAKER SYSTEM with Bluetooth® Wireless Technology

Owner's Manual

PLEASE READ BEFORE OPERATING THIS EQUIPMENT.

Model: CR4202

FCC INFORMATION:

This equipment has been tested and no found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates; uses and can radiate radio frequency energy and, if not used these instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment of and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC WARNING:

This equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual. Modifications not authorized by the manufacturer may void user's authority to operate this device.

POWER SOURCE

Recharging the battery:

The unit has a built in DC 7.4V, Li-ion rechargeable battery, recharge as follow:

1. Connected the unit to a computer or any USB charger using the supplied connection cable as below:
 - Open the water proof cover on the rear of unit as the figure below:



- Connect the Micro USB plug from the supplied connection cable to the Micro USB port on the rear of unit.
- Connect the full size USB plug to the USB port on a computer or any USB charger with DC 5V output. During charging, the Red Charging indicator will illuminate. When charging is complete, the light will turn off. (During charging, you can also play the music as usual.)
- When finished charging, unplug the Micro USB plug from the unit then close the water proof cover completely and tightly. Otherwise, water may enter.

Notes:

Your battery will last longer if you following these simple guidelines for charging and storing.

- A. For charging first time, charge it at least 10 hours.
- B. Recharging and store the unit within the temperature range of 5°C~35°C (40°F~95°F).

LOCATION OF CONTROL

- C. Do not over charge (longer than 24 hours). Excessive charging or discharging may shorten the battery's life.
- D. Battery life naturally shortens slowly over time.
- E. The rechargeable battery incorporated in this product is not user replaceable.

Location of Controls:



1. ⏮ / ▾ - (Skip/Search Backward/Volume Down) button
2. BT (Blue Tooth) indicator
3. ⏭ / ▴ + (Skip/Search Forward/Volume Up) button
4. Radio/Aux indicator
5. ▶ / || (Play/Pause) button
6. Charging indicator
7. ⏻ (Sources selection) button
8. ⏻ (Standby On/Off) button
9. Micro USB port (For charging only)
10. AUX (in) jack
11. Water proof cover

OPERATION

BT (Bluetooth) mode

The first time you use the unit or pair it to a new Bluetooth device, please follow these instructions:

1. Press the ⏻ (Standby On/Off) button on the top of unit to power on the unit.
2. Press the ⏻ (Sources selection) button repeatedly until the Blue BT (Blue Tooth) indicator is light and blinking.
3. Power on the external Bluetooth device and enter searching mode. Start pairing following the on screen instructions from the external Bluetooth device. After pairing, the indicator will stop blinking.

Notes:

- When the external BT device searched the unit, our model number "CR4202" will appear on the display of external Bluetooth Device.
- Pairing code "0000" or "1234" may need to enter.

Normal operation after pairing:

1. Turn on the BT function of the external Bluetooth device.
2. Power on the unit and enter to BT mode as previous procedures, wait until the BT indicator stop blinking. (It needs take a few seconds).
3. Plays the music in the connected Bluetooth device as usual.
4. During playback:
 - Press and hold the ⏮ / ▾ - or ⏭ / ▴ + button to adjust volume level.

OPERATION

- Press the **⏮/▶** - or **⏭/▶** + button repeatedly to skip tracks.
 - Press the **⏸/||** button to pause; press again to resume normal playback.
5. When finished listening, press the **⏻** (Standby On/Off) button to shut off the unit.

Radio FM Mode:

1. Press the **⏻** (Standby On/Off) button on the top of unit to power on the unit.
2. Press the **⏵** (Sources selection) button repeatedly until the Green Radio indicator is light.
3. Press the **⏭/▶** + button to search and play the next available FM station.
Or, press the **⏮/▶** - button to search and play the previous available FM station.
4. Repeat the same procedures until the desired FM station is searched and played.
5. During playback, press and hold the **⏮/▶** - or **⏭/▶** + button to adjust volume level.
6. When finished listening, press the **⏻** (Standby On/Off) button to shut off the unit.

Radio Antenna:

The Antenna wire is built in the unit for radio reception. If reception is weak, remove the unit to a new location to improve the reception.

OPERATION

AUX (in) Mode:

1. Connect the 3.5mm stereo jack from the supplied connection cable to the AUX out/Line Out/Phone jack on the external audio player.
2. Open the water proof cover on the rear of unit. Connect the other 3.5mm plug to the AUX (in) jack.
3. Press the **⏻** (Standby On/Off) button on the top of unit to power on the unit.
4. Press the **⏵** (Sources selection) button repeatedly until the Orange Radio indicator is light.
(Note: if no 3.5mm jack inserted to the AUX (in) jack, this function cannot be selected.)
5. Plays the music on the connected external audio player as usual. (Make sure the volume output level of the external audio player is set to high level. Otherwise, sound from this unit is weak.)
6. During playback, press and hold the **⏮/▶** - or **⏭/▶** + button to adjust volume level.
7. When finished listening, press the **⏻** (Standby On/Off) button to shut off the unit.
8. Unplug the 3.5mm plug from the unit then close the water proof cover completely and tightly. Otherwise, water may enter.

IMPORTANT:

If the 3.5mm plug was inserted into the AUX (in) jack on the unit, the BT (Bluetooth) function will cut off automatically. Unplug this cable before using the BT function.

SPECIFICATION

General Specification:

Power source: Built in DC=7.4V, Li-ion rechargeable battery.
Recharge by DC=5V from Computer or USB charger through Micro USB port (Computer and USB Charger not included).

Radio FM Frequency: 87.5 – 108.0 MHz
Audio Power: 4 W (RMS)
Speaker Impedance: .. 7 W, 4 Ohm,
BT Effective range : Up to 32 feet in open area

Accessories:

1 x User's Manual
1 x Micro USB Connection Cable (For charging only)

Note: The specifications and accessories are subject to change without notice.

IMPORTANT: THE WATER RESISTANCE LEVEL OF THE UNIT IS FOR WATER SPLASHING PROTECTION ONLY. NEVER PUT IT INTO WATER.

LIMITED WARRANTY

Craig warrants this product to be free from manufacturing defects in material and workmanship under normal use for a period of 90 days from date of purchase. If service is required, please return the product to the store where it was purchased for exchange; or, pack the unit in the original packing material with all accessories if applicable, a copy of your sales receipt and a Cashier's check or Money Order for \$10.00 (to cover shipping and handling costs) payable to Craig Electronics Inc. For consumers in Canada, please make sure that the cashier check or money order is redeemable through a U.S. bank. Ship your product freight pre-paid. Your unit will be repaired, replaced or if the unit can not be repaired or replaced, a refund will be forwarded to you within four weeks of receipt of your unit. Please ship your unit to:

Craig Electronics Inc.
1160 NW 163 Drive
Miami, FL 33169

This warranty is void if the product has been: a) Used in a commercial application or rental. b) Damaged through misuse, negligence, or abuse. c) Modified or repaired by anyone other than an authorized Craig service center. d) Damaged because it is improperly connected to any other equipment.

LIMITED WARRANTY

Note: This warranty does not cover: a) Ordinary adjustments as outlined in the Owner's Manual which can be performed by the customer. b) Damage to equipment not properly connected to the product. c) Any cost incurred in shipping the product for repair. d) Damage to the product not used in the USA.

This warranty is not transferable and only applies to the original purchase. Any implied warranties, including the warranty of merchantability, are limited in duration to the period of this expressed warranty and no warranty whether expressed or implied shall apply to the product thereafter.

Under no circumstance shall Craig be liable for any loss or consequential damage arising out of the use of this product. This warranty gives specific legal rights. However, you may have other rights which may vary from state to state. Some states do not allow limitations on implied warranties or exclusion of consequential damage. Therefore, these restrictions may not apply to you.

To Obtain Service on your Product
email:service@craigelectronics.com